# OWER PROBE

## DC VOLTAGE TESTER

#PPTVM01





#### Introduction

The Voltage Tester provides a simple and fast method of testing DC voltage up to 35 volts.

## **⚠** Warnings

- Read, understand and follow the Safety Rules and Operating Instructions in this manual before using this instrument.
- The tester's safety features may not protect the user if not used in accordance to the manufacturer's instructions.
- Keep fingers away from the metal probe tips when taking measurements.
- Comply with all safety codes. Use approved personal protective equipment when working near live electrical circuits.
- Do not use if the instrument or test leads appear damaged.
- Verify tester's operation by measuring a known voltage.
- Do not use the tester in wet or damp environments or during electrical storms.
- Do not use the tester near explosive vapors, dust or gasses.
- Do not use the tester if it operates incorrectly. Protection may be compromised.
- Do not apply voltage that exceeds the tester's maximum rated input limits.

#### **Input Limits**

Function	Maximum Input
Voltage DC	35V


#### **International Safety Symbols**

4	Dangerous Voltage
	Double Insulation, Protection Class II.

	Direct Current (DC) voltage only	
CE	Conforms to relevant European Union directives	

#### **Voltage Tester Description**

1	External test probe (-)
2	LCD for voltage display
3	Instrument test probe (+)

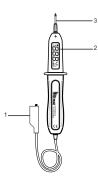


#### **DC Voltage Measurements**

### **⚠** Warnings

Observe all safety precautions when working on live voltages.

• For DC voltage test, when the LCD display "+", said The test probe is touching the positive pole of the circuit. When the LCD shows "-", it means The test probe is touching the negative pole of the circuit.

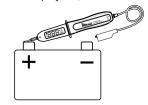

Specifications

Opecifications		
DC Voltage Measurement	5.0-35.0V	
Voltage steps	0.1V	
Accuracy	±(1%+1dgt)	
Response time	0.5s	
Max Operating Temp	-10°C to 50°C	
Max Storage Temp	-10°C to 60°C	
Relative Humidity	80% maximum	
Altitude	<7000ft (2000m)	
Certification	CE	
Weight	75g	
Dimension	222.6x39.6x31.8mm	

#### Maintenance

- 1. Keep the tester dry. If it gets wet, wipe it off.
- 2. Use and store the tester in normal temperatures. Temperature extremes can shorten the life of the electronic parts and distort or melt plastic parts.
- 3. Handle the tester gently and carefully, dropping it can damage the electronic parts or the case.
- 4. Keep the tester clean. Wipe the case occasionally with a damp cloth. Do not use chemicals, cleaning solvents, or detergents.



PPTVM01